

GENERAL FITTING GUIDE

PK328 & PK350



CONTENTS

- Manual Single Lever Body with Handle fitted
- 12mm x 1/2" BSP Flexible Inlet Pipes x2
- 1/2" x 1/2" BSP Outlet/Spout Connecting Pipe
- Screws/Wall Plugs x4
- Fast Fix Spout
- Hose & Handset (Bath Shower Mixer option only)



ASSEMBLY


1 - Remove the brass spindle from the spout by loosening the grub screw.



2 - Push the threaded part through the plate from the front.



3 - Fit rubber washer and screw the back-nut up to it from behind the plate

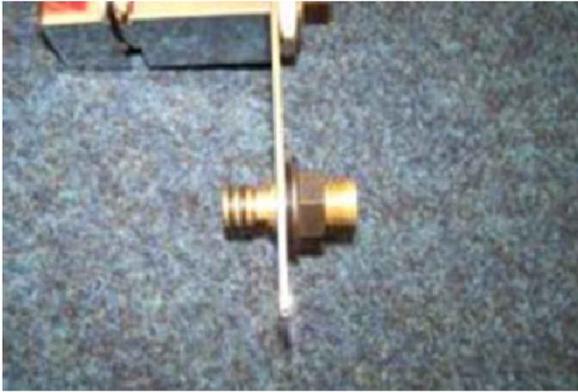

4 - Attach the flexible inlet pipes (Do not over tighten) These are to be plumbed into the Hot & Cold water supplies. Flush out the pipes prior to this to remove any debris.



5- Attach the outlet/spout connection pipe to the connector from the back of the body to the spout thread using the 1/2" BSP Flexible Pipe. A loop MUST be made so the pipe can be pushed upwards or downwards into the wall recess.



6 - Using the screws and wall plugs provided, fix the assembled plate into the wall, after plumbing connections have been made. The joints should be checked for leaks. NOTE: A wall baton may be needed to fix the screws into to make a solid fix. A small bead of silicone sealant needs to be added to the back of the plate to make a water tight seal.



7 - Attach the spout by pushing it over the brass spindle. Please ensure that the grub screw is fully removed so that the 'O' rings do NOT become damaged. Line-up the spout, and tighten the grub screw up. The mixer is now fully operational by using the handle.



BATH SHOWER MIXER

The hose may now be connected to the bottom of the spout, and to the handset. the handset will fit into the parking bracket when not in use.

AFTERCARE

To maintain the appearance, periodically it should be cleaned with a soft damp cloth. The use of abrasive or solvent cleaners will damage the finish of the product and shot NOT be used.